

Basic Troubleshooting

LED not displayed

Check that your power supply is correct voltage (AC220V)

Check the connection of signals cable

Display appears scrambled

Check that all connections are correct and tight.

Check that there is no harsh interference nearby.

XL2L30AC

DIGITAL PANEL METERS

OPERATION MANUAL

Shaanxi XIELI Photo Electric Instrument Co., Ltd

Add: No.2 Xinke Rd, Eastern Development Zone, Xi'an 710043, Shaanxi, CHINA

Tel: +86-29-82622375 Fax: +86-29-84023638

Email: info@xieli-china.com

Website: www.xieli-china.com

XIELI

ISO9001 & CE Certified

XL2L30AC Digital AC Ammeter/Voltmeter


Power supply AC220V measuring AC current/voltage

OPERATION SPECIFICATIONS:

Power Source	AC200-245V			
Frequency	50Hz-60Hz			
Measure Voltage range	AC200.0~245.0V	Resolution: 0.1V		
Measure Current range	AC0.15A~10.00A AC10.00~30.00A	Resolution: 1mA	Auto adapt measure range	
Display	9.1mm Ultra-bright Red LED display			
Digit count	Voltage Reading	9999	Current Reading	9999
Over Measure Range	LED Flicker			
Sample Frequency	100ms			
Operating Temperature	0 to 55 °C			
Storage Temperature	-10 to +80 °C			
Humidity	20—80%			

CAUTION:

1. Don't touch any component of the meter when it is working
2. The LED will be flashing if the Load voltage or current over maximum-rated value. You must adjust the load voltage or current, otherwise the meter will be damaged!

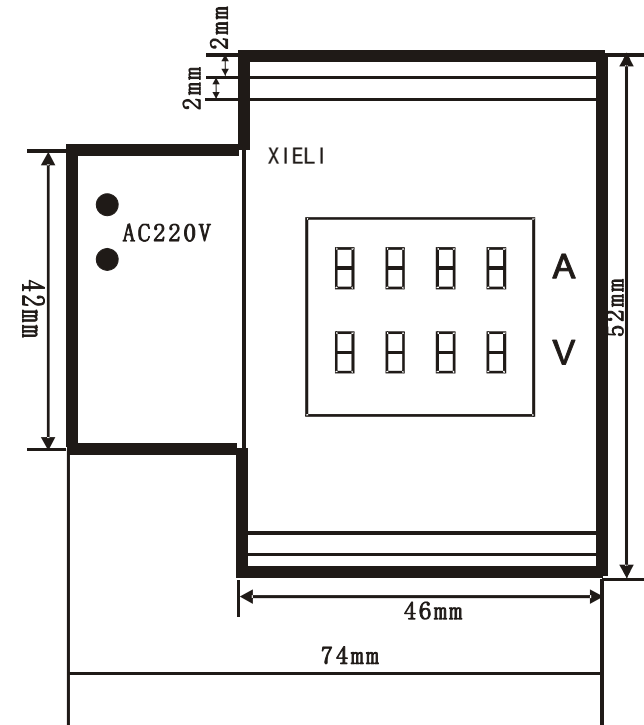

Instruction of connection:

The live wire was connected with input of live wire, and then cross CT, finally it will connect with the live wire terminal of operating load.

The null wire was connected with input of null wire, and then it was connected with the live wire terminal of operating load